

CLEARSHIELD® APPLICATION GUIDE


YOU WILL NEED




CLEARSHIELD®



APPLICATOR PAD /
COTTON PAD

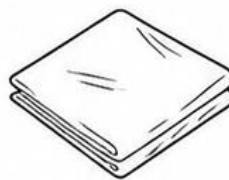

LINT-FREE
CLOTH

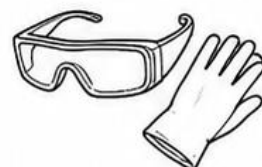

PPE (GLOVES &
EYE PROTECTION)

1

GLASS PREPARATION

- Remove all dirt, dust and grease.
- Remove any water spots or limescale.
- The glass must be completely dry before application.
- Avoid touching the cleaned surface with your hands.




2

HORIZONTAL APPLICATION

Apply a small amount of ClearShield® to the applicator pad.

Starting in the top corner, wipe evenly across the glass using horizontal strokes, ensuring complete coverage.

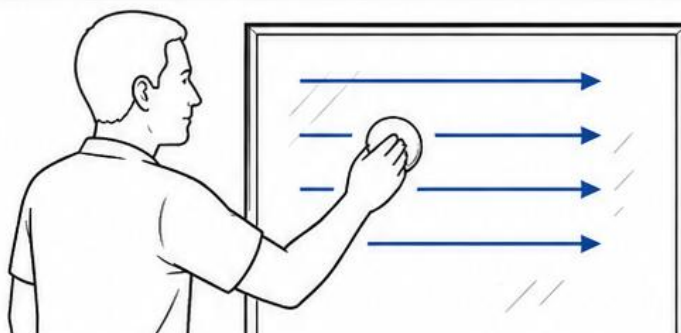


3

VERTICAL APPLICATION

Repeat the application using vertical strokes.

This cross-hatch method ensures the entire surface receives an even coating.

Finally, wipe around the perimeter of the glass to ensure complete edge coverage.

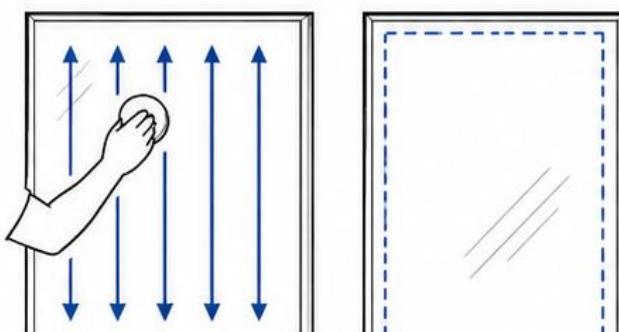

- HORIZONTAL PASS
- - - → VERTICAL PASS
- - - → FINISH THE EDGES

4

POLISH & INSPECT

Allow the coating to react in accordance with the product instructions.

Once ready, polish the surface using a clean lint-free cloth until the glass is crystal clear.

Inspect the glass from different angles to ensure no residue remains.



TOP TIPS



Work on one pane at a time.



Apply evenly – do not miss any areas.



Ensure full edge coverage.



Always use clean applicator pads and polishing cloths.



Replace applicator pads when contaminated.