




THE WHOLESALE GLASS CO.

0208 664 3768


sales@wholesaleglasscompany.co.uk

Injection Mortar


Installation Advice:

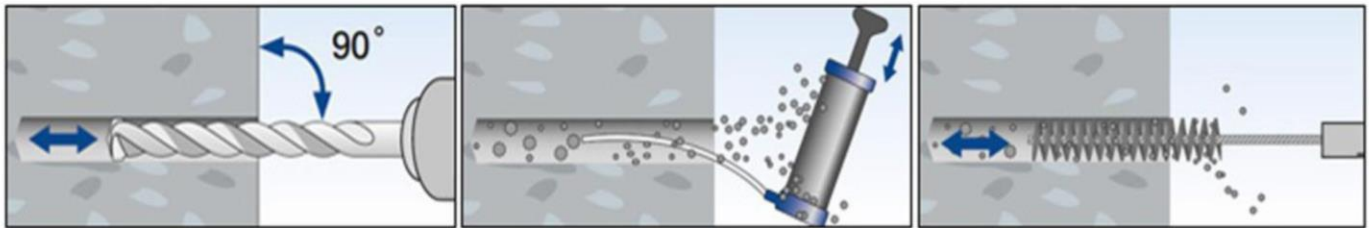


After drilling the correct size fixing hole and cleaning with air pump to remove dust and debris.

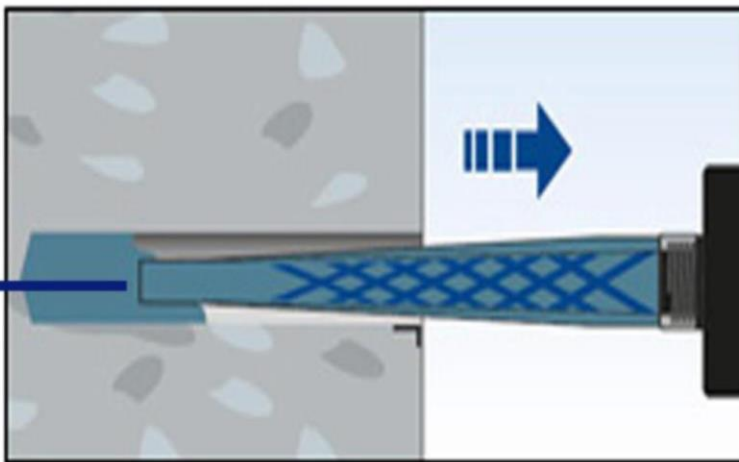

Insert anchor injection resin.
(Clean again with air pump to achieve the perfect fixing surface)

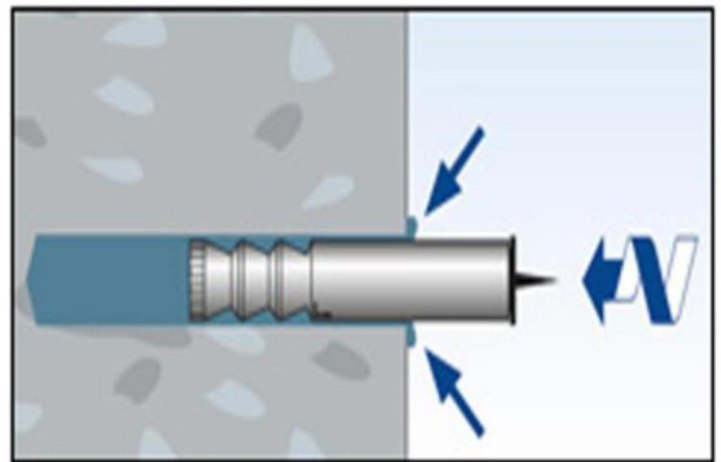

Insert anchor - Rotate to achieve a solid fixing.

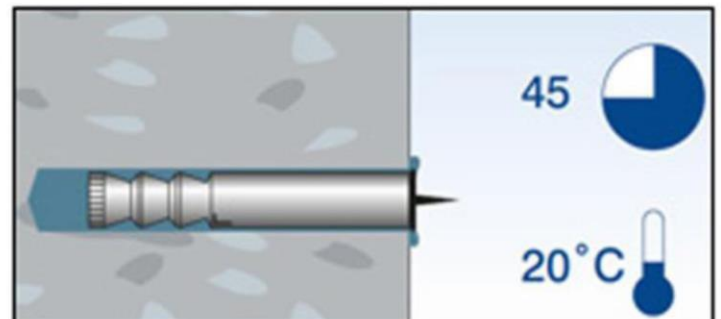

Allow to set - Approximately 45 minutes, dependent on temperature.

Injection Mortar

