




THE **WHOLESALE GLASS** CO.

0208 664 3768


sales@wholesaleglasscompany.co.uk

## Injection Mortar


### Installation Advice:

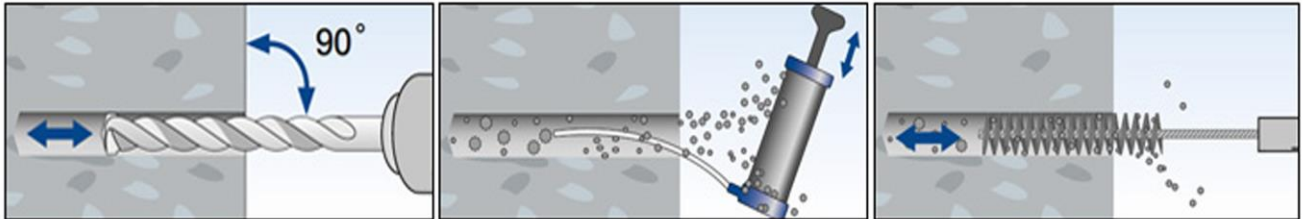


After drilling the correct size fixing hole and cleaning with air pump to remove dust and debris.

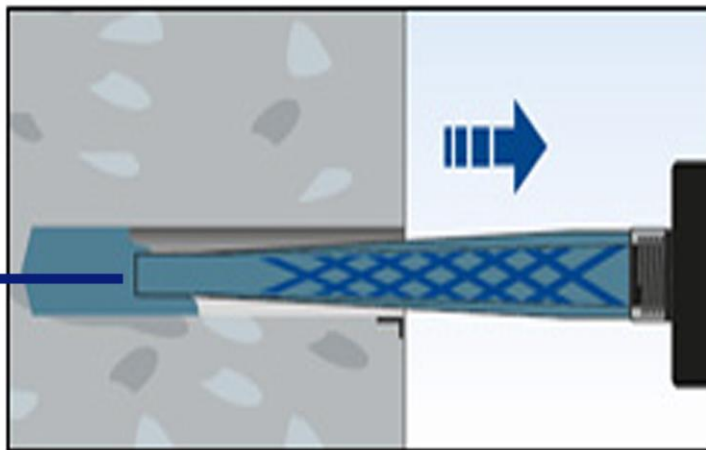

Insert anchor injection resin.  
[Clean again with air pump to achieve the perfect fixing surface]

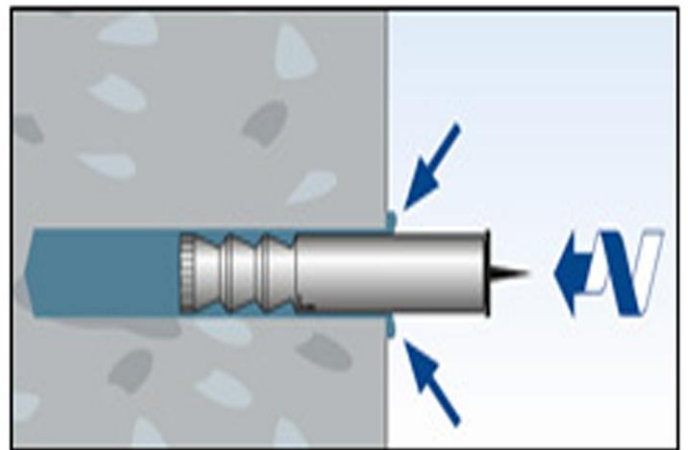

Insert anchor - Rotate to achieve a solid fixing.

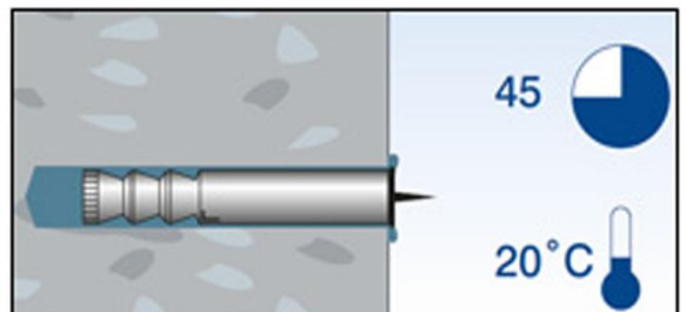

Allow to set - Approximately 45 minutes, dependent on temperature.

Injection Mortar

