





## FISCHER FAZ II A4 Highbond Anchor Bolt


### Installation Advice:

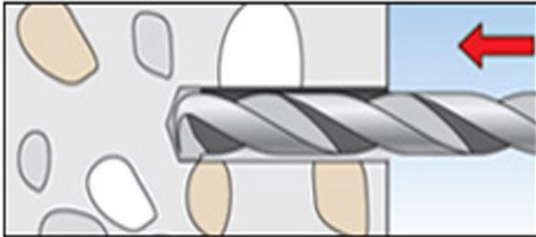


1. Drill correct size fixing hole.

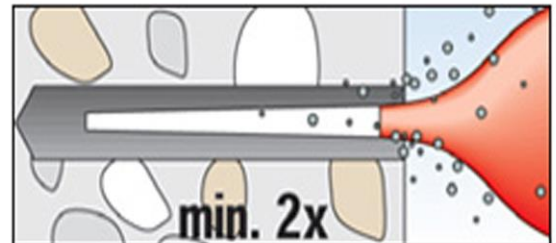

2. Clean with air pump to remove dust and debris.

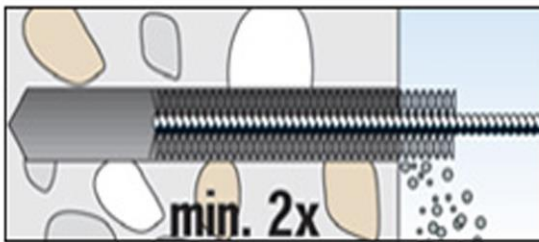


3. Clean with brush to remove any rough debris

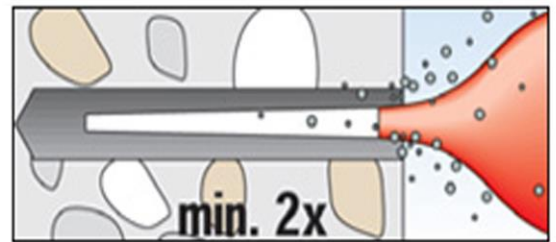


4. Clean again with air pump to achieve the perfect fixing surface.




5. Insert anchor injection resin.

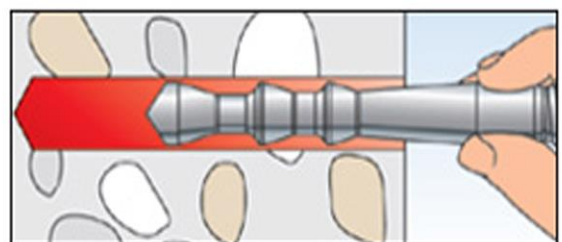

6. Insert anchor.

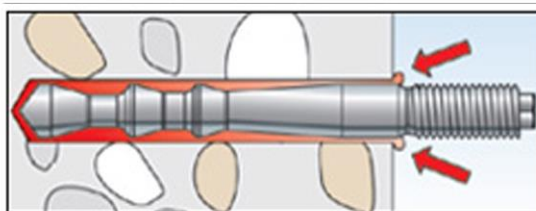

7. Trim any excess resin to ensure a flush fitting surface.

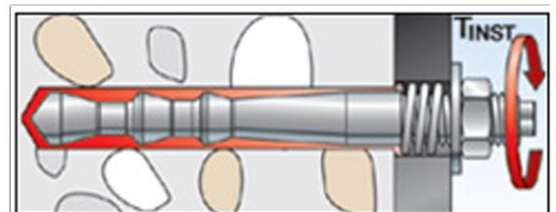

8. Allow to set, simply secure fixings using nut