




Threaded Insert for Timber Fitting Installation Guide

Threaded insert requires a pilot hole in the timber, can be secured using an Allen key or socket wrench.


M8 & M10 Threaded Insert for Timber Fitting - Zinc Alloy - requires a 12mm pilot hole in the timber.
M10 Threaded Insert for Timber Fitting - Zinc Plated Steel - requires a 16mm pilot hole in the timber.



IRWIN Blue Groove Flat Bit is used to drill pilot holes

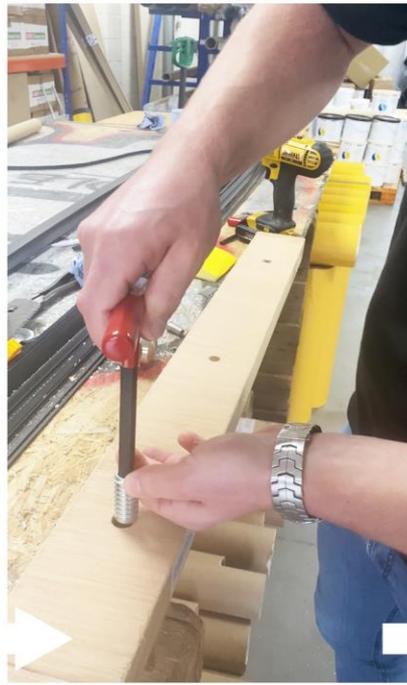

Secure using a 10mm hex (allen) key or socket wrench.

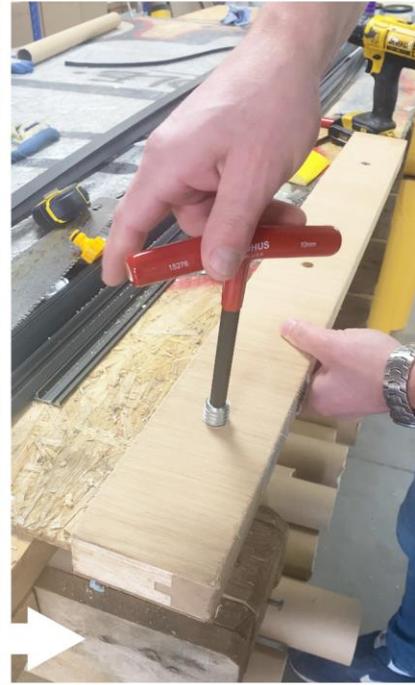

Ready for
suitable thread



Threaded Insert for Timber



Bondhus T-Handle Hex End

IRWIN Blue Groove Flat Bit

Both these tools are available
to purchase separately.